



## 740C CD Player Remote Control Codes

**All Codes are NEC format.**

System Code = A0 A0 (NEC Code)

| Key           | Command Code (hex) |
|---------------|--------------------|
| 1             | 01                 |
| 2             | 09                 |
| 3             | 11                 |
| 4             | 19                 |
| 5             | 02                 |
| 6             | 0A                 |
| 7             | 12                 |
| 8             | 1A                 |
| 9             | 03                 |
| 0             | 0B                 |
| 1+            | 13                 |
| Prog          | 1B                 |
| Play          | 15                 |
| Pause         | 1D                 |
| Stop          | 1C                 |
| Random        | 0E                 |
| Remain        | 0F                 |
| Skip left     | 04                 |
| Skip right    | 0C                 |
| Repeat        | 16                 |
| AB            | 17                 |
| <<            | 05                 |
| >>            | 0D                 |
| Intro         | 06                 |
| Space         | 1E                 |
| Open/Close    | 07                 |
| Power toggle  | 44                 |
| Power On      | 46                 |
| Power Off     | 45                 |
| Bright toggle | 47                 |
| Menu          | 48                 |
| Select        | 49                 |
| Mute          | 4A                 |
| Mute on       | 4B                 |
| Mute off      | 4C                 |

Note the Discrete Mute On and Off and Power On and Off codes which don't have dedicated buttons on the remote are also actually available from the remote by special procedure, see product manual



Information in this document has been carefully checked for accuracy; however, Cambridge Audio's policy is one of continuous improvement, therefore design and specifications are subject to change without prior notice. If you notice any errors please feel free to email us at: [support@cambridgeaudio.com](mailto:support@cambridgeaudio.com)

This document contains proprietary information protected by copyright. All rights are reserved. No part of this document may be reproduced by any mechanical, electronic or other means, in any form, without prior written permission of the manufacturer.

© Copyright Cambridge Audio Ltd 2008