



## Sonata DV30 IR Remote Control Codes

### CD Codes

System Code = 08 F7 (NEC Code)

Key	Command Code(HEX)
Open/Close	09H
1	01H
2	00H
3	02H
4	03H
5	15H
6	14H
7	16H
8	17H
9	11H
0	53H
10+	12H
Play	0DH
Stop	08H
Skip Left (hold for Rewind)	06H
Skip Right (hold for Forward)	55H
Rewind	4DH
Forward	1BH
Shuffle	19H
Repeat	18H
Display Dim	22H
Display Bright	21H

## DVD Codes

System Code = 12 (RC-5 Codes)

Key	Command Code(Decimal)
Open/Close	1
Standby	2
1	31
2	32
3	33
4	34
5	35
6	36
7	37
8	38
9	39
0	40
10+	41
Return	22
Angle	5
Audio	3
Sub_Toggle	4
Display Dim	50
Display Bright	51
Up	13
Left	16
Select	17
Right	18
Down	19
Title	10
Setup	20
Info	6
DVD Menu	12
Play/Pause	24
Stop	27
Skip Left (hold for Rewind)	23
Skip Right (hold for Forward)	25
Rewind	26
Forward	28
Repeat	8
Slow	29

## TUNER Codes

System Code = 17 (extended) (RC5 Code)

<b>Key</b>	<b>Command Code(Decimal)</b>
Standby Toggle	66
Preset 1	91
Preset 2	92
Preset 3	93
Preset 4	94
Preset 5	95
Preset 6	96
Preset 7	97
Preset 8	98
Preset 9	99
0	100
10+	118
Volume Up	64
Display Dim	76
Display Bright	75
Alarm (hold for Sleep)	125
Sleep	73
Mute Toggle	67
Volume Down	65
Up (Preset)	106
Left, Skip Back (hold for Rewind)	78
Rewind	69
Select	87
Right, Skip Forward (hold for Forward)	77
Fwd	68
Down (Preset)	107
Info	121
Tone/Balance	123
CD	111
DVD	112
AUX	113
TUNER	114
MP3	115
BAND	101

## AUX/MP3 Codes

System Code = 17 (extended) (RC5 Code)

Key	Command Code(Decimal)
Standby Toggle	66
Volume Up	64
Display Dim	76
Display Bright	75
Alarm (hold for Sleep)	125
Sleep	73
Mute Toggle	67
Volume Down	65
Up (Preset)	106
Left, Skip Back (hold for Rewind)	78
Rewind	69
Select	87
Right, Skip Forward (hold for Forward)	77
Forward	68
Down (Preset)	107
Info	121
ipod Menu	72
Tone/Balance	123
ipod Play/Pause	70
Ipod Shuffle	74
Ipod Repeat	80
CD	111
DVD	112
AUX	113
TUNER	114
MP3	115

## Hidden AR30 DR30 Commands

System Code = 17 (extended) (RC5 Code)

Key	Command Code(Decimal)
Power On	102
Power Off	103
Mute On	110
Mute Off	119

Information in this document has been carefully checked for accuracy; however, Cambridge Audio's policy is one of continuous improvement, therefore design and specifications are subject to change without prior notice. If you notice any errors please feel free to email us at: [www.cambridgeaudio.com/sts](http://www.cambridgeaudio.com/sts)

This document contains proprietary information protected by copyright. All rights are reserved. No part of this document may be reproduced by any mechanical, electronic or other means, in any form, without prior written permission of the manufacturer.

© Copyright Cambridge Audio Ltd 2008

Gallery Court, Hankey Place, London SE1 4BB England

Tel: +44 (0)20 7940 2200 Fax: +44 (0)20 7940 2233 Web: [www.cambridge-audio.com](http://www.cambridge-audio.com)