



# CXR120/200 IR Remote Control Codes

v1.0

*All codes are RC-5, System code 19*

Function	Decimal command code
Preset 1	1
Preset 2	2
Preset 3	3
Preset 4	4
Preset 5	5
Preset 6	6
Preset 7	7
Preset 8	8
Power Toggle	12
Power On	14
Power Off	15
Mute Toggle	13
Mute	50
Un-mute	51
Volume Up	16
Volume Down	17
LCD cycle Dim, Bright, Off	72
Info	21
Back	22
Play/Pause	24
Skip Right	32
Skip Left	33
Menu	52
Stop	54
Surround Modes	77
Direct	78
Stereo Modes	79
Up	80
Down	81
Trigger A	82
Trigger B	83
Trigger C	84
Left	85



Right	86
Select/Enter	87
Tone (treble/bass)	94
Source 1	100
Source 2	101
Source 3	102
Source 4	103
Source 5	104
Source 6	105
Source 7	106
Source 8	107
MP3	108
StreamMagic	109
TV/ARC	110
Tuner (AM/FM)	111
FM	112
AM	113
Tuner Stereo/Mono	116
AM/FM Preset Store	119
Lip Sync	127



The following Zone 2 commands are also supported (CXR200 only)

*System code 27*

Function	Decimal command code
Power Toggle	12
Power On	14
Power Off	15
Mute Toggle	13
Mute	50
Un-mute	51
Volume Up	16
Volume Down	17
Source 1	100
Source 2	101
Source 3	102
Source 4	103
Source 5	104
Source 6	105
Source 7	106
Source 8	107
MP3	108
StreamMagic	109
TV/ARC	110
Tuner (AM/FM)	111
FM	112
AM	113

© Copyright Cambridge Audio Ltd 2015